




5000 SERIES

NO ROOFWALK NEEDED FOR
5700, 5800 & 5900-SERIES CARS

- CUT PARTS FROM SPRUES (DO NOT BREAK OFF)
- CEMENT DOOR HOLDERS TO INSIDE OF CAR
- CEMENT DOORS IN PLACE

ONLY CORRECT
DOOR(S) SUPPLIED

AUXILIARY DOOR SHOULD
BE THE LEFT-HAND DOOR
ON DOUBLE-DOOR
CARS.

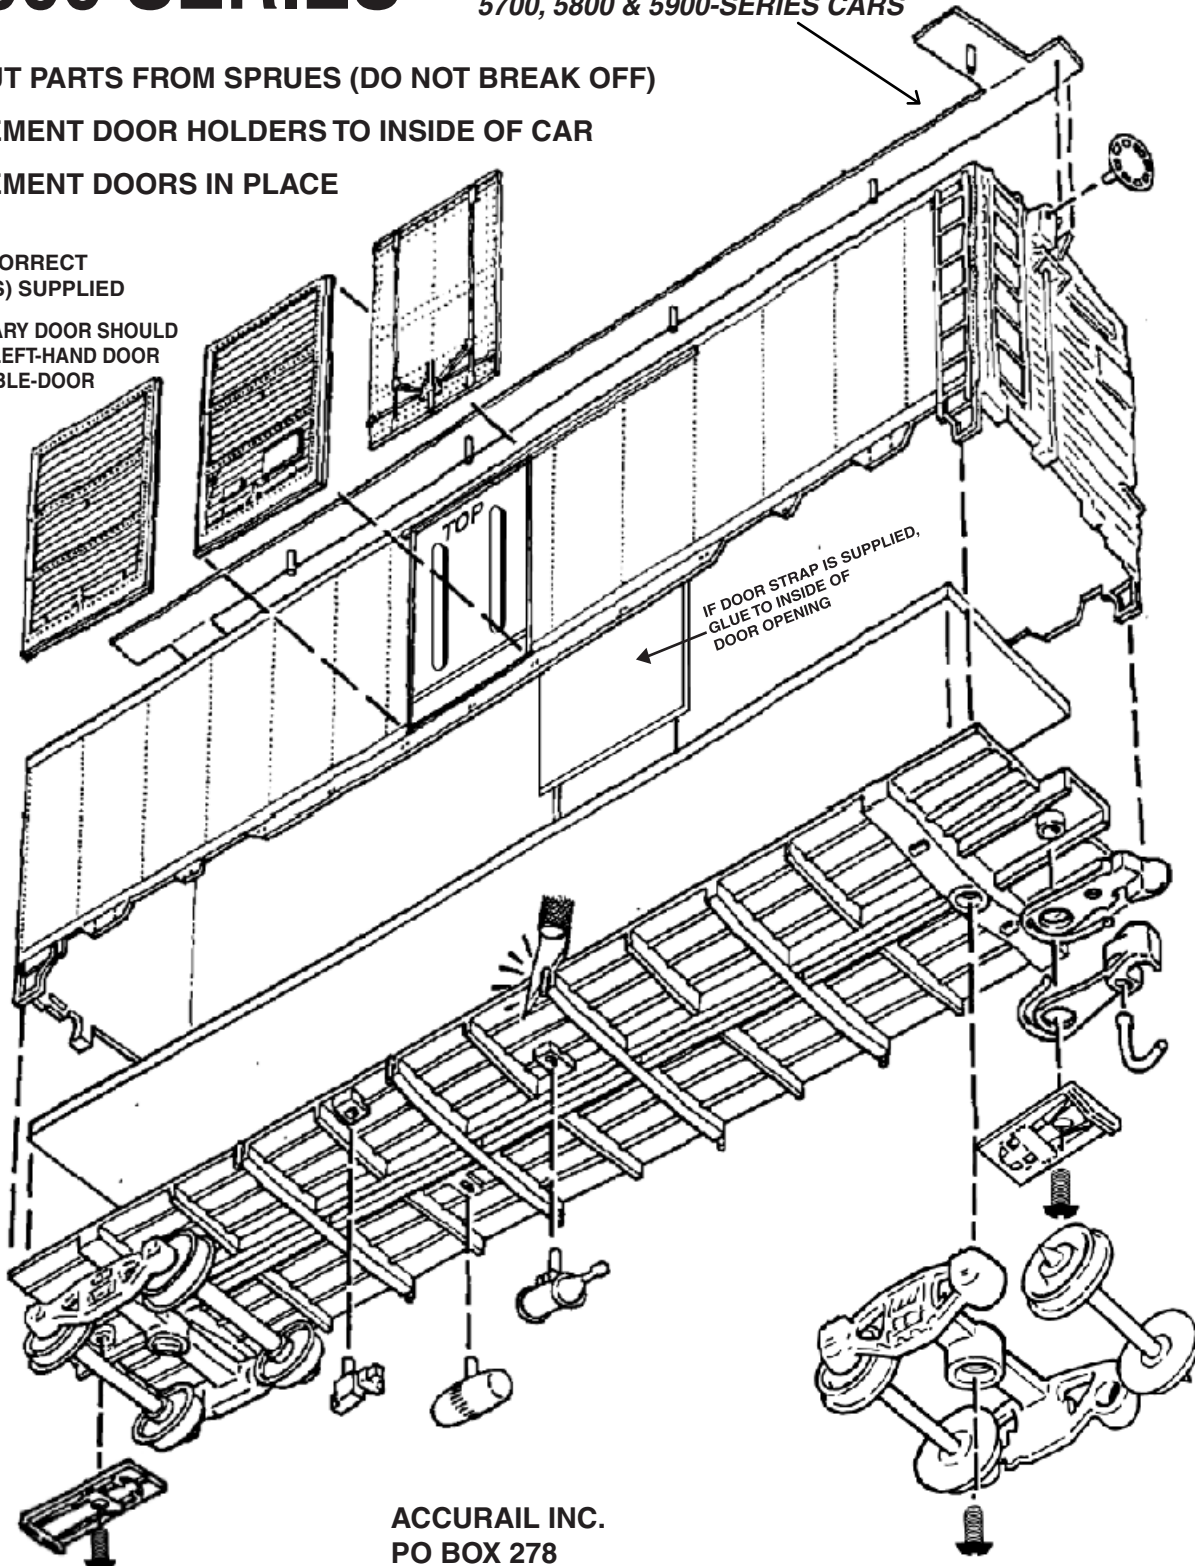

ACCURAIL INC.
PO BOX 278
ELBURN, IL 60119