



5000, 5200, 5300, 5700, 5900 SERIES


*NO ROOFWALK NEEDED FOR
5700 OR 5900-SERIES BOXCARS*

- CUT PARTS FROM SPRUES
- CEMENT DOOR STRAPS TO INSIDE OF CAR
- CEMENT DOORS TO DOOR STRAPS

DOOR WITH TACK BOARDS
SHOULD ALWAYS BE IN THE
CENTER OF THE CAR

AUXILLIARY DOOR
ALWAYS ON
THE LEFT
FOR
DOUBLE
DOOR
CARS

IF A DOOR STRAP IS SUPPLIED, GLUE
TO THE INSIDE OF DOOR OPENING,
LEAVING ROOM AT BOTTOM TO
SNAP IN THE UNDERFRAME

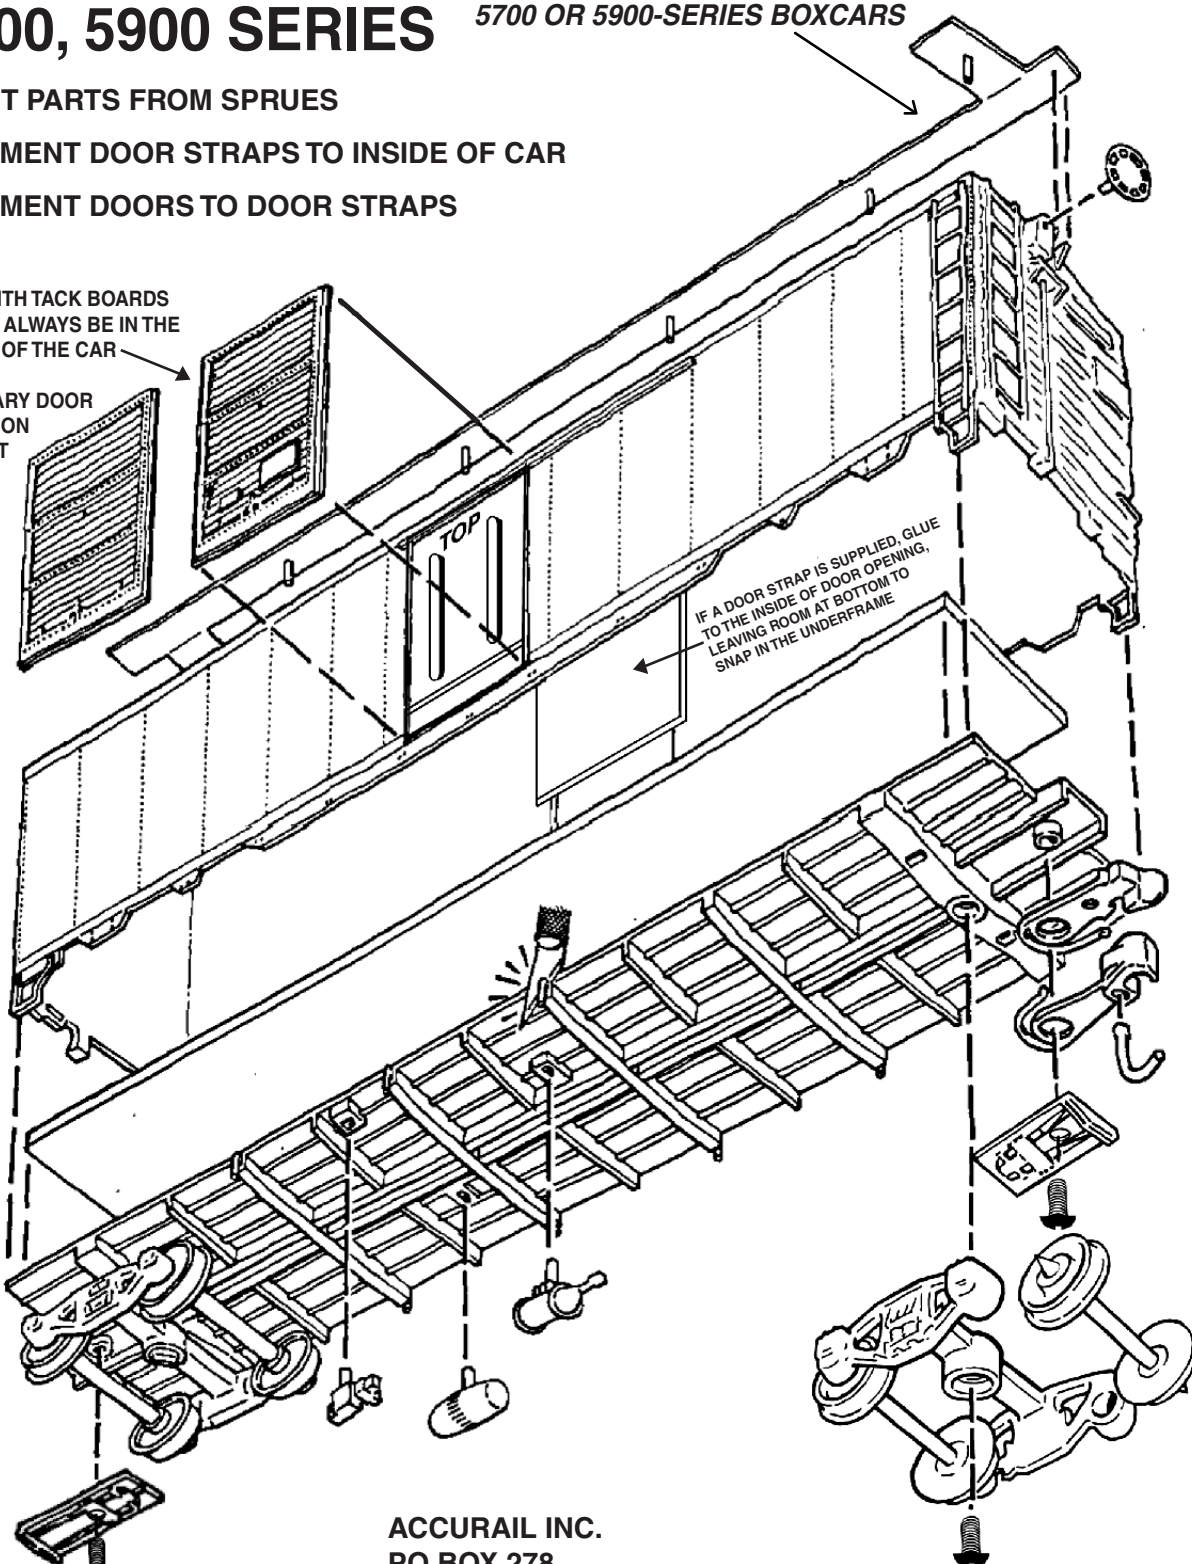

ACCURAIL INC.
PO BOX 278
ELBURN, IL 60119